




PREPARATION AND APPLICATION PROCEDURE

VINYL COVERING

PREPARATION	FINISH
<p>Procedure:</p> <ul style="list-style-type: none">- Rinse the surface thoroughly with a pressure washer.- Apply TexNov Surface Preparer (4 water / 1 concentrate).- Vigorously brush the surface and let sit for 15 minutes keeping the surface wet.- Rinse the surface thoroughly with a pressure washer.- Let the surface dry prior to applying the finish coating	<p>Procedure:</p> <ul style="list-style-type: none">- In warm weather dilute with water (50 ml/liter) for ease of application.- <u>The temperature of the surface should not exceed 30 ° C at the application.</u>- Apply two coats of TexNov Acrylic Coating. Use a brush or roller with 10 mm bristles (24 hours between each coat).- Let the surface dry for 24 hours. <p>Important:</p> <ul style="list-style-type: none">- Some plastics made from recycled materials are not compatible.- We recommend that you install a pale color to decrease expansion of the coating.

Maintenance: Clean the surface with **TexNov Surface Preparer** (6 water / 1 Preparer).

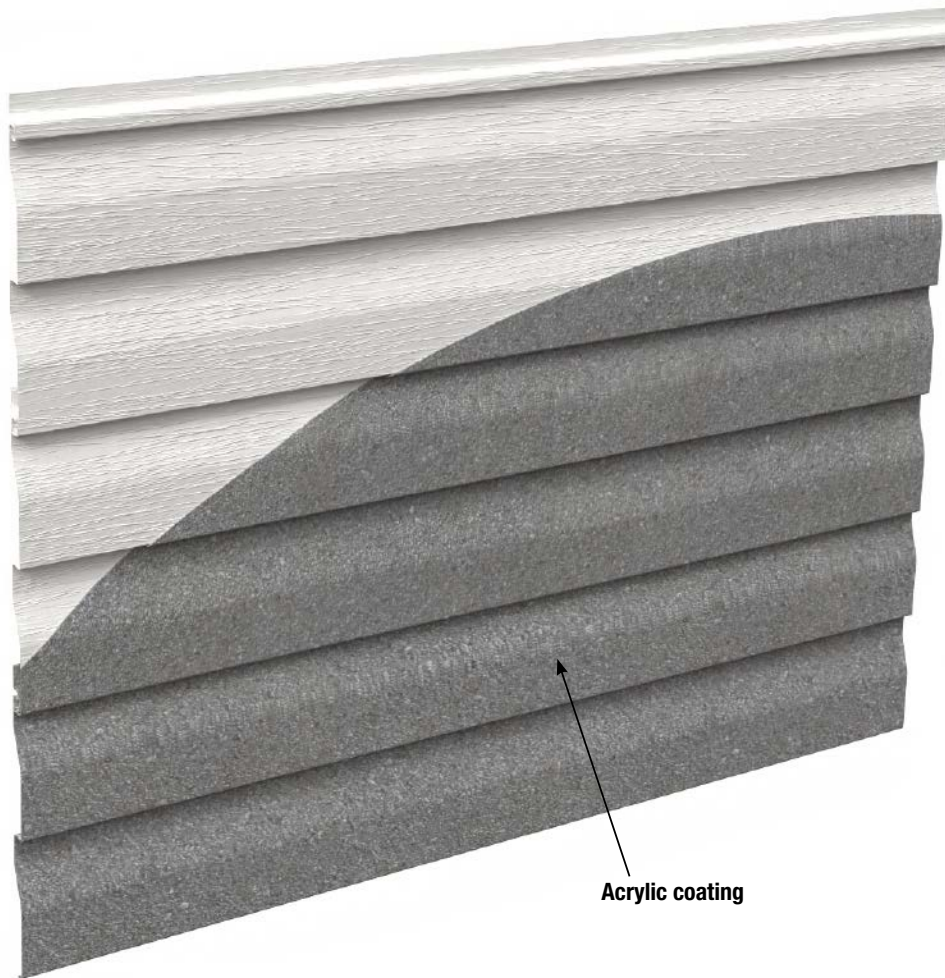

Acrylic coating